

Chapter 4: Single prosthesis Section 4-5: Ø 5.5 mm bases



Ø 5.5 mm bases.

These ones are designed to place personnalized abutments or

Ø5.5 base's choice



Periodontal height g (mm)	Emergence diameter (d)	
	Ø 5	
1.5	DEVC15.5H1.5	
2.2	DEVCI5.5H2.2	
3	DEVCI5.5H3	
4	DEVCI5.5H4	

Necessary material

Hexagonal screwdriver	Abutment driver	Extractor
	2004/21/20 (2)	
DCM1.2H (C/L)	DPFMPCIC-2	DEMPCI2(/L)-2


Prosthetic screw	Laboratory screw		
I	I		
DVPCI	DVPLABCIH2-8		
Torque wrench*			






Removal of the screw

 \emptyset 5.5 mm bases are fitted with a tapping extraction located at the level of the implant connection which retains the screw. In order to remove the screw (laboratory or prosthesis), make sure to lift the screw together with the unscrewing movement without disenganging the screw from the screwdriver.

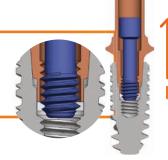

Steps performed by the dental technician

- 1 Select in your CAD software the periodontal height according to the emergence profile. If necessary, choose the base shortened to 3 mm depending on the available occlusal space.
- 2 If necessary physically shorten the base.
- 3 Screw the laboratory screw through the base on the model, using the hexagonal screwdriver.
- 4 Try the framework on the base.
- **5 -** Realization of the cosmetic.
- **6 -** Unscrew the base of the model using the hexagonal screwdriver.
- 7 Proceed with bounding according to the manufacturer's recommendations.
- **8 -** Set up the screw-retained tooth on the model. Make the last adjustments.

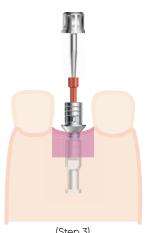

(Step 3)



By no means the connection of the abutment must be adjusted. To make modifications, it is possible to use a grinding handle (AMP).



5 - Carry the screw-retained tooth in the mouth thanks to the abutment driver, screwed beforehand on the base. Impact slightly the base, unscrew the abutment driver.



6 - In the mouth, screw the prosthetic screw in the screw-retained tooth using the hexagonal screwdriver. Check the tightening torque (15 N.cm) using the torque wrench.



7 - Block the access to the screw to protect it.



Observe the tightening torque (max. 15 N.cm) to ensure proper operation on the base.

In case of prosthesis maintenance



1 - Clear the access to the screw. Clean the screw head (with powerful air / water jet).



Impact the hexagonal screwdriver and unscrew the screw from the base using the hexagonal screwdriver.

Use the torque wrench if necessary.

(See removal of the screw on the 1st page).



3 - Disengage the screw-retained tooth using the associated extractor and the torque wrench if necessary.

Additional information

Cleaning and maintenance procedures must be consulted before using the product. The instructions can be found on our website: http://doc-globald.com/0197.pdf.

